alcatelonetouch.com

For more information about how to use the cellphone,please go to www.alcatelonetouch.com to download complete user manual. Moreover, from the website you can also consult FAQ, realize software upgrade via PC suite,etc.

ALCATELonetouch

my world in one touch

ALCATELonetouch

Introduction.....

TCT Mobile Limited would like to thank you for purchasing this cellphone.

Desktop

- Convenient at-a-glance view of Widget applications
- Menu shortcuts for quick access

Side key

- Access to "**Camera**"

Power media applications

- Music player & Radio
- Webcam

The 2.0 Megapixel camera is the best companion for PC instant messaging.

Bluetooth

With Bluetooth 2.0 supporting A2DP profiles, enjoy handsfree conversations.

Table of contents

Safety and use..... 6
General information..... 11
1 Getting started..... 13
1.1 Set-up..... 13
1.2 Power on your cellphone..... 15
1.3 Power off your cellphone..... 15
2 Your cellphone..... 16
2.1 Keys..... 17
2.2 Main screen icons..... 19
2.3 Widget bar..... 21
3 Calls..... 22
3.1 Making a call..... 22
3.2 Calling your voicemail..... 22
3.3 Receiving a call..... 23
3.4 During a call..... 23
3.5 Conference calls..... 24
4 Directory..... 25
4.1 Consulting your contacts..... 25
4.2 Adding a contact..... 26
4.3 Available options..... 27
5 Messages..... 28
5.1 Access..... 28
5.2 Conversational mode and conventional mode..... 28
5.3 Create message..... 29
5.4 Search..... 29
5.5 Alerts..... 29
5.6 Available options..... 30

6 Email 33
6.1 Access 33
6.2 Email account set-up 33
6.3 Create Email 34
6.4 Inbox 34
6.5 Outbox 34
6.6 Sent 34
6.7 Drafts 34
6.8 Available options 35
7 Opera Mini 36
8 Facebook 37
9 mTweet 38
10 Camera 39
10.1 Access 39
10.2 Camera 39
10.3 Video 40
11 Media 42
11.1 Music 42
11.2 Video 44
11.3 Radio 45
12 My Account 46
13 Settings 47
13.1 Phone settings 47
13.2 Call settings 49
13.3 Security 51
13.4 Network 52
13.5 Connectivity 52
14 Call log 53
14.1 Access 53
14.2 Available options 53

15 Tools 54
15.1 Calendar 54
15.2 Alarm 55
15.3 Fake call 55
15.4 Notes 56
15.5 Calculator 56
15.6 File manager 57
15.7 World clock 62
15.8 Converter 62
15.9 Stopwatch 62
16 Java 63
16.1 Java applications 63
16.2 Java settings 63
16.3 Java network 63
16.4 Trusted certificates 63
17 Applications 65
17.1 Web 65
17.2 Bluetooth™ 66
17.3 Local games 68
17.4 News 68
17.5 Weather 69
17.6 Services 69
18 Profiles 70
18.1 General 70
18.2 Meeting 71
18.3 Outdoor 71
18.4 Indoor 71
18.5 Silence 71
18.6 Flight mode 71

19 web2go 72
20 Making the most of your cellphone 73
20.1 PC suite 73
20.2 Webcam 73
20.3 One Touch Upgrade 74
21 Latin input mode/character table 75
22 Alcatel Mobile Phones Limited Warranty 76
23 Accessories 78
24 Troubleshooting 79

Safety and use.....

We recommend that you read this chapter carefully before using your cellphone. The manufacturer disclaims any liability for damage, which may result as a consequence of improper use or use contrary to the instructions contained herein.

• TRAFFIC SAFETY:

Given that studies show that using a cellphone while driving a vehicle constitutes a real risk, even when the hands-free kit is used (car kit, headset...), drivers are requested to refrain from using their cellphone when the vehicle is not parked. Check the laws and regulations on the use of wireless cellphones and their accessories in the areas where you drive. Always obey them. The use of these devices may be prohibited or restricted in certain areas.

When driving, do not use your cellphone and headphone to listen to music or to the radio. Using a headphone can be dangerous and forbidden in some areas.

When switched on, your cellphone emits electromagnetic waves that can interfere with the vehicle's electronic systems such as ABS anti-lock brakes or airbags. To ensure that there is no problem:

- do not place your cellphone on top of the dashboard or within an airbag deployment area,
- check with your car dealer or the car manufacturer to make sure that the car's electronic devices are shielded from cellphone RF energy.

• CONDITIONS OF USE:

You are advised to switch off the cellphone from time to time to optimize its performance.

Remember to abide by local authority rules of cellphone use on aircrafts.

Operational Warnings: Obey all posted signs when using mobile devices in public areas.

Follow Instructions to Avoid Interference Problems: Turn off your mobile device in any location where posted notices instruct you to do so. In an aircraft, turn off your mobile device whenever instructed to do so by airline staff. If your mobile device offers an airplane mode or similar feature, consult airline staff about using it in flight.

Switch the cellphone off when you are in health care facilities, except in designated areas. As with many other types of equipment now in regular use, cellphones can interfere with other electrical or electronic devices, or equipment using radio frequency.

Switch the cellphone off when you are near gas or flammable liquids. Strictly obey all signs and instructions posted in a fuel depot, gas station, or chemical plant, or in any potentially explosive atmosphere.

When the cellphone is switched on, it should be kept at least 15 cm from any medical device such as a pacemaker, a hearing aid or insulin pump. In particular when using the cellphone you should hold it against the ear on the opposite side to the device, if any.

Read and follow the directions from the manufacturer of your implantable medical device. If you have any questions about using your mobile device with your implantable medical device, consult your healthcare provider.

To avoid hearing impairment, answer the call before holding your cellphone to your ear. Also move the handset away from your ear while using the "hands-free" option because the amplified volume might cause hearing damage.

It is recommended to have proper supervision while small children use your cellphone.

When replacing the cover please note that your cellphone may contain substances that could create an allergic reaction.
Always handle your cellphone with care and keep it in a clean and dust-free place.
Do not allow your cellphone to be exposed to adverse weather or environmental conditions (moisture, humidity, rain, infiltration of liquids, dust, sea air, etc.). The manufacturer's recommended operating temperature range is -10°C (14°F) to +55°C (131°F) (the max value depends on device, materials and housing paint/texture).
Over 55°C (131°F) the legibility of the cellphone's display may be impaired, though this is temporary and not serious.
Do not open or attempt to repair your cellphone yourself.
Do not drop, throw or try to bend your cellphone.
Do not paint it.
Use only batteries, battery chargers, and accessories which are recommended by TCT Mobile Limited and its affiliates and are compatible with your cellphone model.TCT Mobile Limited and its affiliates disclaim any liability for damage caused by the use of other chargers or batteries.
Your cellphone should not be disposed of in a municipal waste. Please check local regulations for disposal of electronic products.
Remember to make back-up copies or keep a written record of all important information stored in your cellphone.
Some people may suffer epileptic seizures or blackouts when exposed to flashing lights, or when playing video games. These seizures or blackouts may occur even if a person never had a previous seizure or blackout. If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult your doctor before playing video games on your cellphone or enabling a flashing-lights feature on your cellphone. Parents should monitor their children's use of video games or other features that incorporate flashing lights on the cellphones. All persons should discontinue use and consult a doctor if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation. To limit the likelihood of such symptoms, please take the following safety precautions:
- Play at the farthest distance possible from the screen.

When you play games on your cellphone, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. Follow these instructions to avoid problems such as tendinitis, carpal tunnel syndrome, or other musculoskeletal disorders:
- Take a minimum of a 15-minute break every hour of game playing.
- If your hands, wrists, or arms become tired or sore while playing, stop and rest for several hours before playing again.
- If you continue to have sore hands, wrists, or arms during or after playing, stop the game and see a doctor.

Prolonged exposure to music at full volume using the music player may damage your hearing. Set your cellphone's volume to it's lowest setting prior to inserting headphones in your ears and adjust the volume to your preference. Only use headphones that are recommended by TCT Mobile Limited and it's affiliates.

• PRIVACY:

Please note that you must respect the laws and regulations in force in your jurisdiction or other jurisdiction(s) where you will use your cellphone regarding taking photographs and recording sounds with your cellphone. Pursuant to such laws and regulations, it may be strictly forbidden to take photographs and/or to record the voices of other people or any of their personal attributes, and reproduce or distribute them, as this may be considered to be an invasion of privacy.
It is the user's sole responsibility to ensure that prior authorization be obtained, if necessary, in order to record private or confidential conversations or take a photograph of another person; the manufacturer, the seller or vendor of your cellphone (including the operator) disclaim any liability which may result from the improper use of the cellphone.

• BATTERY AND ACCESSORIES:

Before removing the battery from your cellphone, please make sure that the cellphone is switched off.
Observe the following precautions for battery use:
- Do not attempt to open the battery (due to the risk of toxic fumes and burns).
- Do not puncture, disassemble or cause a short-circuit in a battery,
- Do not burn or dispose of a used battery in the garbage or store it at temperatures above 60°C (140°F).

Batteries must be disposed of in accordance with locally applicable environmental regulations. Only use the battery for the purpose for which it was designed. Never use damaged batteries or those not recommended by TCT Mobile Limited and/or its affiliates.

This symbol on your cellphone, the battery and the accessories means that these products must be taken to collection points at the end of their life:
- Municipal waste disposal centers with specific bins for these items of equipment
- Collection bins at points of sale.

They will then be recycled, preventing substances being disposed of in the environment, so that their components can be reused.

In European Union countries:
These collection points are accessible free of charge. All products with this sign must be brought to these collection points.

In non European Union jurisdictions:
Items of equipment with this symbol are not be thrown into ordinary bins if your jurisdiction or your region has suitable recycling and collection facilities; instead they are to be taken to collection points for them to be recycled.
In the United States you may learn more about CTIA's Recycling Program at www.recyclewirelessphones.com

CAUTION: RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS

• CHARGERS

Home A.C./ Travel chargers will operate within the temperature range of: 0°C (32°F) to 40°C (104°F).
The chargers designed for your cellphone meet with the standard for safety of information technology equipment and office equipment use. Due to different applicable electrical specifications, a charger you purchased in one jurisdiction may not work in another jurisdiction. They should be used for this purpose only.

Characteristics of power supply (depending on the country):

Travel charger: Input: 100~240 V, 50~60 Hz, 150 mA
Output: 4.75~5.0 V, 350~550 mA

Battery: Lithium 650 mAh/750 mAh/850 mAh

• RADIO WAVES:

THIS CELLPHONE MEETS THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.

Your cellphone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio-frequency (RF) energy. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. These guidelines include a substantial safety margin designed to ensure the safety of all persons, regardless of age and health.

The exposure standard for cellphones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by public authorities such as the Federal Communications Commission of the US Government (FCC), or by Industry Canada, is 1.6 W/kg averaged over 1 gram of body tissue. Tests for SAR are conducted using standard operating positions with the cellphone transmitting at its highest certified power level in all tested frequency bands.

Although the SAR is determined at the highest certified power level, the actual SAR level of the cellphone while operating can be well below the maximum value. This is because the cellphone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output of the cellphone. Before a cellphone model is available for sale to the public, compliance with national regulations and standards must be shown.

The highest SAR value for this model cellphone when tested is 1.02 W/Kg for use at the ear and 0.997 W/Kg for use close to the body.

While there may be differences between the SAR levels of various cellphones and at various positions, they all meet the government requirement for RF exposure. For body-worn operation, the cellphone meets FCC RF exposure guidelines provided that it is used with a non-metallic accessory with the handset at least 1.5 cm from the body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

Additional information on SAR can be found on the Cellular Telecommunications & Internet Association (CTIA) Web site: http://www.phonefacts.net

The World Health Organization (WHO) considers that present scientific information does not indicate the need for any special precautions for use of cellphones. If individuals are concerned, they might choose to limit their own or their children's RF exposure by limiting the length of calls, or using "hands-free" devices to keep cellphones away from the head and body. (fact sheet n°193). Additional WHO information about electromagnetic fields and public health are available on the following website: http://www.who.int/peh-emf.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference to radio or television reception, which can be determined by turning

the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

For the receiver devices associated with the operation of a licensed radio service (e.g. FM broadcast), they bear the following statement:

This device complies with Part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference.

For other devices, they bear the following statement:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference

(2) this device must accept any interference received, including interference that may cause undesired operation.

Your cellphone is equipped with a built-in antenna. For optimal operation, you should avoid touching it or degrading it.

As mobile devices offer a range of functions, they can be used in positions other than against your ear. In such circumstances the device will be compliant with the guidelines when used with headset or usb data cable. If you are using another accessory ensure that whatever product is used is free of any metal and that it positions the cellphone at least 1.5 cm away from the body.

• LICENCES

Obigo® is a registered trademark of Obigo AB.

microSD Logo is a trademark.

The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by TCT Mobile Limited and its affiliates is under license. Other trademarks and trade names are those of their respective owners.

one touch 506A Bluetooth QD ID RAD160

eZiText™ and Zi™ are trademarks of Zi Corporation and/or its Affiliates.

Java™ and all Java™ based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.

Opera Mini™ is a registered trademark of Opera Mini.

Facebook and the f Logo are trademarks of Facebook, Inc., and are used under license.

Hearing Aid Compatibility [1]

Your cellphone is rated: "For Hearing Aid", to assist hearing device users in finding cellphones that may be compatible with their hearing devices.
This device is HAC M3 & T3 compatible.
For more information please refer to "Hearing Aid Compatibility with Mobile Phones" leaflet or visit our website http://www.alcatelonetouch.com

General information

- **Website:** www.alcatelonetouch.com
- **Facebook:** http://www.facebook.com/alcatelonetouchusa
- **Twitter:** http://www.twitter.com/alcatel1touch
- **Hot Line Number:** In the United States, call 877-702-3444 for technical support.

On our Internet site, you will find our FAQ (Frequently Asked Questions) section. You can also contact us by e-mail to ask any questions you may have.

An electronic version of this user guide is available in English and other languages according to availability on our server: www.alcatelonetouch.com

Your cellphone is a transceiver that operates on GSM networks with 850 and 1900 MHz bands.

[1] Contact your network operator for service availability.

Protection against theft [1]

Your cellphone is identified by an IMEI (cellphone serial number) shown on the packaging label and in the product's memory. We recommend that you note the number the first time you use your cellphone by entering *#06# and keep it in a safe place. It may be requested by the police or your operator if your cellphone is stolen.

Disclaimer

There may be certain differences between the user manual description and the cellphone's operation, depending on the software release of your cellphone or specific operator services.

TCT Mobile shall not be held legally responsible for such differences, if any, nor for their potential consequences, which responsibility shall be borne by the operator exclusively.

[1] Contact your network operator for service availability.

Getting started .....

1.1 Set-up

Removing and installing the back cover

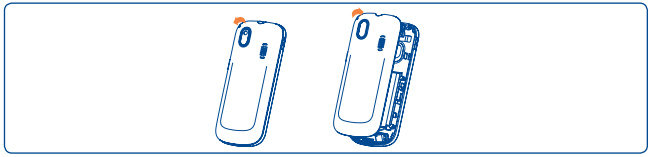

Inserting and removing the SIM card (1)

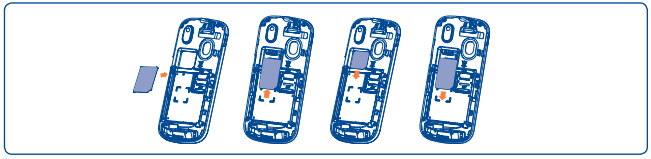

Place the SIM card with the chip facing downwards and slide it into its housing. Make sure that it is correctly inserted. To remove the card, press it and slide it out.

(1) Check with your network operator to make sure that your SIM card is 3V or 1.8V compatible. The old 5 Volt cards can no longer be used. Please contact your operator.

Removing and installing the battery

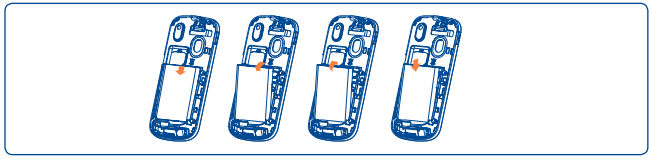

Charging the battery

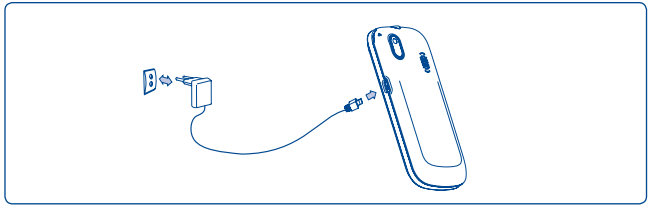

Connect the battery charger to your cellphone and outlet respectively.

- The charging may take about 20 minutes to start if the battery is flat.
- Be careful not to force the plug into the socket.
- Make sure the battery is correctly inserted before connecting the charger.
- The outlet must be near to the cellphone and easily accessible (avoid electric extension cables).

- When using your cellphone for the first time, charge the battery fully (approximately 3 hours). You are advised to fully charge the battery ( ).
- To reduce power consumption and energy waste, when battery is fully charged, disconnect your charger from the plug; switch off Bluetooth when not in use; reduce the backlight time, etc.

The charge is complete when the animation stops.

1.2 Power on your cellphone

Hold down the key until the cellphone powers on, type in your PIN code if necessary and then confirm. The main screen is displayed.

If you do not know your PIN code or if you have forgotten it, contact your network operator. Do not leave your PIN code with your cellphone. Store this information in a safe place when not in use.

If cell broadcast messages are displayed, you can browse through them or press to return to the main screen.

While the cellphone is searching for a network, "**Searching/Emergency**" will be displayed.

In the power on screen, you also have access to the functions of "**Radio**", "**Camera**", "**Music**", etc. even if there is no SIM card inserted.

1.3 Power off your cellphone

Hold down the key from the main screen.

2 Your cellphone.....

2.1 Keys

Navigation key
Confirm an option (press the middle of the key)
Activate music player (press and hold the middle of key)
Scroll widget bar (press the right or left of the key)

Answer
Send a call
In idle screen:
Access call log (Redial) (press)
Activate fake call (press and hold)
During MP3 Playing:
Switch between Headset and speaker (press and hold)

Switch on/Switch off the cellphone (press and hold)
End call
Return to idle screen

Left softkey

Right softkey

Access your voicemail (press and hold)

In Edit mode:
- Press: access the language list
- Press and hold: enter zero

In Edit mode:
- Press: change input methods
- Press and hold: access the Symbols table

In idle screen:
- Press: #
- Press and hold: activate/deactivate the vibrate mode

In Edit mode:
- Press: (space)

Camera key: access "**Camera**" (press)

2.2 Main screen icons [1]

Battery charge level.

Vibrate alert: your cellphone vibrates, but does not ring or beep (see page 71).

Bluetooth status (Activated).

Headset connected.

Keypad locked.

Call forwarding activated: your calls are forwarded (see page 50).

Alarm or appointments programmed (see page 55).

Level of network reception.

Voicemail message arrived.

Missed calls.

Radio is on.

WAP alerts.

Roaming.

SIM card missing.

GPRS connection status (Activated).

GPRS connecting (or idle).

Sending a MMS.

MMS receiving.

Silence mode: your cellphone does not ring, beep or vibrate with the exception of the alarm (see page 71).

SMS unread.

MMS unread.

Flight mode.

[1] The icons and illustrations in this guide are provided for information purposes only.

2.3 Widget bar

Widget bar with menu items as a shortcut for quick access.

3 Calls.....

3.1 Making a call

Dial the desired number then press the key to place the call. If you make a mistake, you can delete the incorrect digits by pressing the right softkey.

To hang up the call, press the key.

Making an emergency call

If your cellphone is covered by the network, dial emergency number and press the key to make an emergency call. This works even without a SIM card and without typing the PIN code or unlocking the keypad.

3.2 Calling your voicemail (1)

Your voicemail is provided by your network to avoid missing calls. It works like an answering machine that you can consult at any time. To access your voicemail, hold down the key.

If the access number for your operator's voicemail service does not work, dial the number that you were given. To change this number, refer to "**My numbers**" (see page 49).

To use your voicemail service from abroad, contact your network operator before leaving.

(1) Contact your network operator to check service availability.

3.3 Receiving a call

When you receive an incoming call, press the key to talk and then hang up using the key.

If the icon is displayed, the vibrator is activated and there is no ringtone.

If the icon is displayed, the cellphone neither rings nor vibrates.

The caller's number is displayed if it is transmitted by the network (contact your network operator to check service availability).

Muting the ringtone

You may mute ringtone of current incoming call by pressing .

Answer the call by pressing the key.

Rejecting a call

Press the key once to reject the call, or reject call with SMS.

3.4 During a call (1)

Available functions

During a call, press "**Options**" to use your directory, calendar, messages etc. without losing your caller.

WARNING: move the handset away from your ear while turn on the speaker because the amplified volume might cause hearing damage.

You can switch the audio function from handset to Bluetooth device when connected.

(1) Contact your network operator to check service availability.

Adjusting the volume

You can adjust the sound level during a call using the up/down key.

Handling two calls

- Answering a second call (ensure that "**Call waiting**" is activated, see page 50).
- To call a second party during a call, you may press "**Options**" and select "**New call**".

3.5 Conference calls (1)

Your cellphone allows you to talk to several people at the same time. If you are on a double call, press "**Options**" and select "**Conference**". If a third call comes in, answer it by pressing the key and speak with your new caller.

This caller becomes a member of the conference if you press "**Options**" and select "**Conference call**".

(1) Contact your network operator to check service availability.

4 Directory .....

4.1 Consulting your contacts

To access the directory from the main screen, press the key and select the icon from the menu.

The whole contact list is categorized by **All, SIM, Phone** and **My favorite**.

All

SIM

Phone

My Favorite

Searching for a contact

You can search for a contact by inputing the initial of their name. Subsequent letters may be added to refine the search. Or you may scroll up/down to find the contact you need when reaches the initial letter among contact list part (A-Z).

Viewing a contact

Select a name from your directory to read the contact information. Select "**Options**" to send messages, edit the contact, etc.

Sending vCard

In this menu, you may send the vCard you wish by SMS, MMS, Email and Bluetooth.

4.2 Adding a contact

Select the directory in which you wish to add contact, press the "**Options**" softkey, select "**Create file**".

Following fields are accessible when you create a new contact in the directory: Name, Mobile, Copy to SIM/Not copy to SIM, Home, Work, Email, Birthday, Birthday reminder, URL, Address, Ringtone, Group.

You can move from one field to another by scrolling up and down.

Birthday reminder

You can set a birthday reminder when editing contact information. This will remind you at regular intervals during the day prior to the set date (see page 54).

If you use your cellphone abroad, store the numbers in your directories in international format "**+**" followed by the country code.

4.3 Available options

From the list of names in All, SIM, Phone and My favorite, you can access the following options:

Send message		Send an SMS to a contact you selected from the directory.
Group		You can view, send messages to the group you select or you can create, delete groups as you want.
Delete contact		Delete the selected contact.
View mode		You may view contacts stored in cellphone only, SIM only or both in SIM and cellphone.
More	**My number**	Type in, modify or send the user's own number by SMS.
	Memory status	View used and available space in SIM and Phone directory.
	Copy all from SIM to phone	Copy the whole directory to the Phone directory only if there is sufficient memory.
	Copy all from phone to SIM	Copy the whole directory to SIM only if there is sufficient memory.

5 Messages * .....

You can create, edit and receive SMS and MMS with this cellphone.

MMS enables you to send video clips, images, photos, animations and sounds to other compatible cellphones and e-mail addresses.

The MMS function can only be used if the service is provided by your operator, and if your contract includes the MMS option and if all the parameters for MMS have been entered.

5.1 Access

You may access this menu using the following options:

- Press to enter the main menu screen, and then select .

- Access from ▲, when widget bar is hide.

5.2 Conversational mode and conventional mode

In conversational view mode, you can view chat history in chronological order. In conventional view mode, you may have access to the following folders: **Inbox, Outbox, Sent, Drafts, Voicemail, Broadcast SMS, Empty folder, Templates, Settings**. Conversational view mode is set as default. You may switch to conventional view mode by selecting "**Options\Settings\Conversational mode\On(Off)**". The following instructions are based on conversational mode.

* Carrier data plan is required to use this feature.

5.3 Create message

From the main menu select "**Messaging**" to create text/multimedia message. You can type a message and you can also modify a predefined message in **Templates** or customize your message by adding pictures, photos, sounds, titles, etc (only available while editing a MMS). While writing a message, select "**Options**" to access all the messaging options. You can save your messages that you send often to **Draft** or **Templates** (MMS only).

Specific letters (accent) will increase the size of the SMS, this may cause multiple SMS to be sent to your recipient.

5.4 Search

To search for a thread, you may input the initial of a contact name. Subsequent letters may be added to refine the search.

5.5 Alerts

5.5.1 WAP alerts

Store WAP push messages.

5.5.2 Setting messages

The storage of provisioning messages.

5.5.3 Voicemail

View and edit the voicemail number.

5.5.4 Broadcast SMS

Store the received Broadcast SMS.

5.6 Available options

5.6.1 View

With this option, you can view details of the selected thread.

5.6.2 Delete

To delete a thread (containing all chat history), select "**Options\Delete**" and then confirm.

5.6.3 Settings

Conversational mode

This option enables you to switch on/off conversational message view mode.

Text messages

Profile settings	Profiles can be retrieved directly from SIM card. Alternatively, you can create your own profile.
Common settings	Delivery report, request for acknowledgement of delivery report On/Off. Reply path (1): show reply path.
Alphabet management	Enables the definition of SMS data coding for SMS sending.
Memory status	Memory used on the cellphone.
Preferred storage	Select default message storage, SIM or cellphone.
Preferred bearer	Bearer preference.

(1) Depending on your network operator.

Multimedia messages

Edit	Set slide timing, edit mode, image size, signature, etc.
Sending	Set the values for validity period, Read report, etc.
Retrieve	Set the values for Home network, Roaming network, etc.
Edit profile	Follow the same procedure as for setting your WAP connection.
Memory status	Memory used on the cellphone.

Broadcast SMS (1)

Receiving mode	Enable to receive broadcast SMS.
Languages	Language selection.
Channel settings	Select/Add/Edit/Delete channels.

5.6.4 Delete all

You may delete all threads with this option.

(1) Depending on your network operator.

6 Email * .....

Your cellphone has an email client with the settings predefined for a few popular email services like – Gmail, Windows live, Yahoo, AOL, etc. Besides this, you can set up other POP3 or IMAP4 email accounts that you may be using.

6.1 Access

Press to enter the main menu, select "**Email**".

6.2 Email account set-up

Pre-defined email service

If you own an email account of predefined services, you can install it to your cellphone by selecting the service (Google Mail, Yahoo, etc.), entering the display name, password and account name, and then confirming with "**Save**" on screen keypad.

New email service

To set up a new email account other than the predefined email services, press "**Create**", select "**Other Email accounts**".

You are required to enter your email address, display name, password, account name, then confirm with "**Save**" on screen keypad. After you'll need to select protocol (1) (POP3 or IMAP4), then enter your incoming server address and outgoing server address, select "**Save**".

* Carrier data plan is required to use this feature.
(1) Consult your email service provider for more information about protocol.

6.3 Create Email

Select "**Email\Options\Create Email**" to enter write email interface.

Select to add receiver from Directory.

6.4 Inbox

Folder of all received Emails.

6.5 Outbox

Folder of all unsent Emails.

6.6 Sent

Folder of all sent Emails.

6.7 Drafts

Folder of all draft Emails.

6.8 Available options

Send and receive all accounts	To connect all email accounts' server in order to receive/send mails.
Create Email	To create a new Email.
Edit account	To edit the detailed configuration information of the selected account.
Delete account	To delete the current selected account.
New account	To create a new email account.
Empty folder	Delete all emails in "**Inbox/Outbox/Sent/ Drafts**".
Empty all folders	Delete all emails in all folders.
Delete marked	To delete the marked mail in the selected folder.
Delete all marked	To delete all marked mails in all folders.

7 Opera Mini *.....

Not only does Opera Mini give you the full Web experience where you stay in touch with your friends, obtain information, do your online banking etc., but it is also designed to save time by using compressed web pages.

To use the Opera mini browser, click on the Opera icon from the main Menu Screen and enter the URL of the page you would like to browse.

* Carrier data plan is required to use this feature.

8 Facebook * .....

Facebook is a social utility that connects people with friends and others who work, study and live around them. It provides a number of features with which users interact, such as Wall, Pokes, etc. To open an account online, please go to: http://www.facebook.com

To Access Facebook

1. Click the Facebook icon from the main Menu Screen.
2. Enter email address/username.
3. Scroll down to enter password.
4. Scroll down again so that the “login” button is highlighted, then click enter.
5. Allow the phone to sync over the air & Facebook menu will appear.

* Carrier data plan is required to use this feature.

9 mTweet * .....

Twitter is a social networking and microblogging service that has gained notability and popularity worldwide. This feature enables cellphone users to exchange news updates and ideas with a community in the form of messages or posts. Posts are displayed on the author's profile page and delivered to the author's subscribers or followers.

To open an account online, please go to: http://twitter.com/.

To Access mTweet:

1. Click on the mTweet icon from the main Menu Screen.
2. Enter email address/username.
3. Scroll down to enter password.
4. Scroll down agin so that the "login" button is highlighted, then click enter.
5. Allow the phone to sync over the air & mTweet menu will appear.

* Carrier data plan is required to use this feature.

10 Camera.....

Your cellphone is fitted with a camera for taking photos and shooting videos that you can use in different ways:

- photos are automatically stored under "**File manager\My creations**".
- send them in a multimedia message (MMS) to a cellphone or an email address.
- send them directly by Bluetooth.
- customize your main screen (see page 47).
- select them as incoming call image to a contact in your directory.
- to access Camera, select the "**Media**" icon on the main menu. Select **Camera** > Click "**OK**".

10.1 Access

To access the function from the main screen, press to access the main menu and select the icon.

10.2 Camera

10.2.1 Take a photo, save or delete

The screen acts as the viewfinder. Position the object or landscape in the viewfinder and press to take the image and the images will be automatically saved. If you don't want it, you may directly delete it by pressing .

10.2.2 Settings in framing mode

Before taking the photo, you can adjust a number of settings by using the following shortcuts:

From the photo shot screen, press "**Options**" to access: "**Image size**", "**Capture mode**", "**Quality**", "**Timer**", "**Banding**", "**Night mode**", "**Exposure Value(EV)**", "**White balance**", "**Color mode**", "**My creations**", "**Storage**", "**Access video**", "**Restore default**".

Press to access **My creations** to view the photos you have taken.

- Image size
- Capture mode
- Quality
- Timer
- Restore default
- Banding
- Night mode
- Exposure Value
- White balance
- Color mode
- My creations
- Storage
- Access video

10.2.3 Options available after taking the photo

Once you have taken a photo, three icons appear on the photo so you can choose to store it in my photos, send your photo by Bluetooth or MMS.

10.3 Video

You can record a video clip of unlimited length, as long as the battery sustains and there is sufficient memory.

We strongly advise you to change the default folder to "**Memory card**" to store your photos and videos.

10.3.1 Framing mode

When you enter the "**Video**" function, you are in Framing mode. Use the cellphone screen as a viewfinder and press "**Options**" for the "**White balance**", "**Exposure Value(EV)**", "**Night mode**", "**Banding**", "**Quality**", "**Record audio**", "**Color mode**","**My videos**", "**Storage**", "**Access camera**", "**Restore default**" settings, and to access "**Tools\ File manager\My videos**".

10.3.2 Recording mode

Once you have chosen your settings, you can launch the recording of your video-clip by pressing the .

If you receive a call in recording mode, video recording will be stopped and a pop up message will inquire if you want to save it after the call ends.

10.3.3 Further operations after shooting a video

After shooting a video, three icons will appear on the screen so you can choose to send your video by MMS, Email or Bluetooth.

In the list of "**My videos**", press "**Options**" to play the video, set as Power on/off, Rename, etc.

11 Media .....

11.1 Music

Access this feature from the main menu by selecting "**Media\Music**".

You will have full flexibility of managing music both on your cellphone and memory card.

Manage Your Music

Your phone supports using a USB cable (not included) and/or a microSD (up to 8GB) to download music to your phone.

1. Connect the USB cable between the phone & computer, or place the microSD card into a compatible microSD card adapter & place into the card reader of your computer
2. Open the "**My Computer**" window.
3. Your phone will be displayed as a "**removable disk**" icon.
4. Open the "**removable disk**" icon to access the this folder.
5. Transfer music files to/from the "**removable disk**" folder.
6. To disconnect, unplug the USB cable or remove the microSD card from the card readerFor MicroSD, remove the card from the microSD card adapter & insert the microSD card into your phone with the golden contact downward.
7. To view your music, select the "Media" icon on the main menu Select **Music** > **Select All Songs** > Click "**OK**".

You can have access to your music files through one of the following:

All songs	Contains all songs both on phone memory and memory card.
My star list	You can simply add your favorite songs to "**My star list**" (max 100).
Folders	Category of songs in folder.

Album/Artist/Genre Music files are categorized by Album, Artist or Genre based on information stored in the tags. Those missing such information will be classified as "**Unknown files**".

Update songs Update the information of songs saved in cellphone or memory card.

11.1.1 Music playing mode

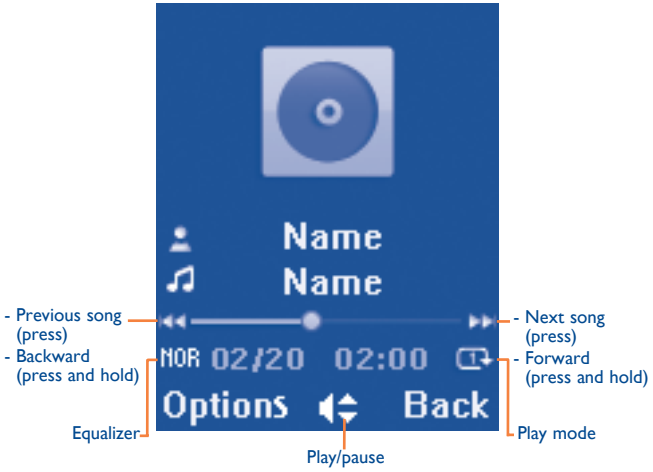

To adjust the volume, use the up/down key.

11.1.2 Settings

Play mode Normal, Repeat current, Repeat all, Shuffle and Repeat shuffle.

Equalizer Different music styles preset in the cellphone for your selection.

Display Enable your player to display song information. or lyric.

11.1.3 Playing with lyrics

Lyrics can be displayed in synchronization with the music.

11.2 Video

"**My videos**" album contains video clips recorded, received or downloaded. All video clips in this folder can be played, set as Power on/off, sent, deleted, renamed, sorted.

Useful icons/keys:

Switch between Normal screen and Full screen display.

Set as play/pause.

Set the volume level.

Previous/next video.

Back to previous menu.

11.3 Radio

Your cellphone is equipped with a radio [1] with RDS functionality. You can use the application as a traditional radio with saved channels or with parallel visual information related to the radio program on the display if you tune to stations that offer Visual Radio service. You can listen to it while running other applications. To access Radio, select the "**Media**" icon on the main menu. Select **Radio** > Click "**OK**".

To use it, you must plug in your headset, which works as an antenna connected with your cellphone.

Available options:

Turn off	Stop playing the radio.
Channel list	Open the list of saved stations.
Save channel	Save the current tuned station to the "**Channel list**".
Auto search	Start auto search and stations will be automatically saved to "**Channel list**".
Enter the frequency	Enter the frequency manually.
Record	Record the radio: files will be automatically saved to "**Notes**" (see page56).
Settings	Scroll up and down to manage settings.
Activate loudspeaker/Play in headset	Listen to the radio using loudspeaker or headset.

[1] The quality of the radio depends on the coverage of the radio station in that particular area.

12 My Account *.....

Allows you to your usage, account activity, bill summary, and more.

* Carrier data plan is required to use this feature.

13 Settings.....

From the main menu, select the menu icon and select the function of your choice in order to customize your cellphone.

13.1 Phone settings

13.1.1 Time and date

Allows you to have settings of date and time, including 12/24h format.

You can also set the daylight saving adjustment.

13.1.2 Display

Wallpaper

The wallpaper is displayed when you switch on your cellphone.

By selecting "**Wallpaper**" you can customize it by replacing the default image or animation displayed on your cellphone.

Theme

This function enables you to customise the colours of your cellphone.

Power On/Off (1)

You can customize your welcome animation or image that appears when you switch on your cellphone.

You can also customize your OFF screen with an image or animation.

(1) Depending on the model.

Brightness

You may adjust black level with respect to LCD display by pressing the key .

Backlight

- **Screen** Allows you to reduce brightness for enhanced battery performance and to save power during periods of expected inactivity.
- **Keypad** You may customize your keypad light by selecting **Always on/Always off** or when needed.

13.1.3 Languages (1)

Display language for messages (select using). The "**Auto**" option selects the language according to the home network (if available).

13.1.4 Headset mode

Switch audio play (incoming call, message beep, alarm beep...) between **Headset only** and **Phone and Headset**.

13.1.5 Keypad

By customising your keypad, you can access any function directly from the idle screen.

13.1.6 Auto lock

Your keypad will be locked automatically, you can set the auto lock time.

Unlock the keypad

To unlock the keypad, you may press for a second.

(1) Contact your network operator to check service availability.

13.1.7 Input mode

Please see chapter "**Latin input mode**", page 75. In addition to the specific characters table for Cyrillic, Chinese, other data input modes are also available in your cellphone. This feature allows you to write short messages and add names with special characters to your directory.

13.2 Call settings

You can access a number of items with this option:

13.2.1 My numbers

Type in or modify your cellphone number or the number to access your voicemail and confirm by pressing "**OK**". Your cellphone number is usually written on your SIM card.

13.2.2 Billing (1)

You can access different items with this option:

Last call cost/Total cost/Max cost/Reset cost/Price per unit	You can view the total cost of charged calls, modify it or reset it and enter the cost of a call in the currency of your choice.
Duration	You can view the total duration of all outgoing calls or reset it.
GPRS counter	Management of data usage volume (in kilobytes).
Beep duration	You can activate or cancel the beep emitted during a call with a specified frequency (enter the frequency and confirm by "OK" on screen keypad).

(1) Contact your network operator to check service availability.

13.2.3 Call waiting

Activate/deactivate the notification of a second incoming call by a beep.

13.2.4 Call forwarding

You can activate, cancel or verify the status of the call forwarding to the voicemail or to a specified number. The following configurations are possible:

- Unconditional: systematic forwarding of all your calls. The icon is displayed.
- Conditional: if your line is busy, if you don't answer or if you are outside the network range.

13.2.5 Call barring

You can activate or deactivate the call barring for outgoing and incoming calls. The various options are:

Outgoing calls	The following configurations are possible:	
	• **All calls**	All outgoing calls are barred.
	• **International calls**	Outgoing international calls are barred.
	• **International except home**	Outgoing international calls except those to your country of subscription are barred.
Incoming calls	The following configurations are possible:	
	• **All calls**	All incoming calls are barred.
	• **Roaming**	Incoming calls are barred when you are abroad.

Cancel all barring	Deactivate all call barring.
Change barring Password	Change the original Password for activating call barring.

13.2.6 Caller ID

Activate/deactivate CLIR.

13.2.7 Auto redial

You can activate or deactivate the automatic callback of your party for calls that do not get through the first time

13.3 Security

Activate PIN	The SIM card protection code is requested each time the cellphone is powered on if this code is activated.
Change PIN	Change PIN code.
Change PIN2	A protection code for certain SIM card features (Billing/Cost/FDN, etc.) will be requested if you attempt to access it, if the code is activated. Select to update it with a new one (between 4 and 8 digits).
Activate phone code	Code is requested each time the cellphone is powered on.
Change phone code	Change cellphone password, its initial one is 1234.
Fixed dialed number	Allows the cellphone to be "locked" so that it can only dial certain numbers, or numbers with certain prefixes. To activate this function, PIN2 code is mandatory.

13.4 Network

Network selection	
Preferred network	List of networks to which you wish to be connected in order of priority.
Select network	The choice of network connection is left up to the user.
Search mode	Network connection can be switched between "**Manual**" and "**Auto**".
GPRS connection (1)	
When needed	GPRS mode active depending on connection requirements.
Always	GPRS mode continuously active.
GPRS international roaming	GPRS data services can be used while roaming overseas.

13.5 Connectivity

A set of profile settings for messaging (MMS, Email...) and Web connection.

(1) Depending on network availability.

14 Call log.....

14.1 Access

You may access this function from the main menu "**Call log**" or by pressing . Once enter this menu, following list will be displayed:

- Missed calls
- Outgoing calls
- Incoming calls

14.2 Available options

When you press "**Options**", you may have access to **Send message, Dial, Edit before call, Delete, Delete all,** etc.

15 Tools .....

15.1 Calendar

Once you enter this menu from "**Tools**", there is a monthly-view calendar for you to keep track of important meetings, appointments, etc. Days with events entered will be marked in color.

Available options:

Today's appointments	See today's appointments.
All appointments	See all the created appointments.
Jump to date	Input the required date and it will be immediately highlighted.
Create	Create an appointment.
Synchronization	Synchronize with the account you've set.
Settings	Set the 1st day of 1 week and 1st week of 1 year.

15.2 Alarm

Your cellphone has a built-in alarm clock with a snooze feature. You can set up to five separate alarms and choose whether or not the alarm should repeat.

Repeat You may select **Once** (default)/**Every day**/**Days (Mon-Fri)** or customize to your desire.

Snooze The alarm will repeat at regular intervals.

Mode You may select the mode of Ringtone: **Ring**, **Vibration only**, **Radio** (1) or **Vibration and Ring**.

15.3 Fake call

This program enables you to call yourself by simulating a caller number/name, ringtone, contact photo at a scheduled time. It helps you to politely escape from social situations at any time you wish. This call can be rejected by ⏻ key.

Settings Predefined settings of Caller name/number, Call time, Ringtone, Image (Contact photo).

Activate Activate a fake call by "**Tools\Fake call\Activate**" or by a long press of the ⌐ key in idle screen. The call will then be made at the predetermined time.

(1) In Radio mode, you are required to plug in headset first. Your cellphone will power on automatically before Radio is on.

15.4 Notes

You can create a note in text or voice format by accessing "**Notes**" from "**Tools**".

Available options:

Open Open and view note.

Send Send by SMS, MMS, Email or Bluetooth.

New text note/voice memo Add new text note or voice memo.

Delete Delete note.

Delete all Delete all notes.

While recording a voice memo, you can define the audio format (AMR, WAV or AWB), Quality (High/Low), and Storage (Cellphone, memory card).

15.5 Calculator

Access this feature by selecting "**Calculator**" from "**Tools**".

Enter a number, select the type of operation to be performed, and enter the second number, then press "**=**" to display the result.

Once an operation is complete, you can press ¬ to clear numbers and carry out a new operation.

To return to the main screen, press ⏻.

15.6 File manager

You will have access to all audio and visual files stored in cellphone or memory card in File manager.

15.6.1 My audios

Choose an audio file for an incoming call ringtone, a message alert beep, power on/off ringtone, contact ID tone or an alarm.

The "My audios" album contains the following folders [1]:

- Music: full track music.
- Melodies: melodies that can be set as ringtone.
- Recorded: all recorded sounds.
- General: contains all audio files stored in cellphone or memory card.

DRM: Digital Rights Management feature allows sounds and images to be played while protecting the associated copyright. DRM counter-based files and files with expired rights will not be automatically played when scrolling the list.

[1] The embedded folder names cannot be modified. However, in certain cases, you can modify, delete and add items included in these folders.

15.6.2 My images

You can select an image or a photo as wallpaper, ON/OFF screen, or assign it to a contact in the directory.

The images will be displayed in alphabetical order.

15.6.3 My videos

"**My videos**" album contains video clips recorded, received or downloaded

15.6.4 My creations

This feature stores all the photos captured by your cellphone.

15.6.5 Unknown files

A folder contains all downloaded unsupported file.

15.6.6 Phone

An access point for all files in all folders stored in cellphone.

15.6.7 Memory card

You can access all files stored in the memory card here.

When a memory card is inserted for the first time, it will be scanned and default folders will be created.

Inserting the memory card:

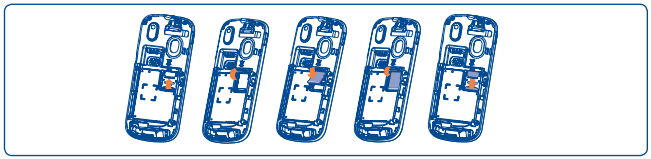

To release the microSD card holder, slide it in the direction of the arrow and lift it. Then insert the microSD card with the golden contact downward. Finally, turn down the microSD holder and slide it in the opposite direction to lock it.

Available options

Open	Open a folder.
Create folder	Create more folders.
Empty folder	Delete all files in one folder.
Memory card	To format or to query its memory status.

15.6.8 Memory status

Indicates how much space is used and how much is currently free on your cellphone and memory card (if any).

Phone

View available memory space.

Your cellphone's memory is shared among several functions: directory, calendar, messages, images, melodies, games and video clips.

Memory card (MicroSD card)

View the memory available on your MicroSD card.

You are advised to save large files (like songs) on your microSD card.

15.6.9 Managing audios, images, videos and others

According to the item chosen, you can access some of the functions below:

View	View the selected image.
Play	Play the selected video/audios.
Send (1)	Send the audio/image/video/Java.
Delete	Delete the audio/image/video selected (not applicable for embedded items).
Set as	• Image→wallpaper, switch ON/OFF, assign it to a contact. • Sound→ringtone, message beep, switch ON/OFF, assign it to a contact.

(1) Some DRM files can not be sent.

Mark/Unmark	Mark/Unmark a tick on a file for further operation. Select "**Mark all**" on Mark menu to mark all directly.
Download	Download new items.
Rename	Rename the audio/image/video.
Sort	Sort the files by name, type and size.
Move to phone/ memory card	Move a file to the phone memory or the memory card.
Install	Install downloaded Java applications.
Properties	Display part of the ID3 Tag content of an MP3 file.
Activate	DRM file option.
Copy to phone/ memory card	Copy a file to the phone memory or the memory card.

15.6.10 Formats and compatibility (1)

- Sounds: mp3, m4a, aac, midi, wav, amr
- Images: jpg, gif
- Videos: 3gp, mp4

(1) Depending on cellphone and market.

15.7 World clock

The World clock shows current local time and the time zone in different cities. You may view up to 3 cities at one time (**Options\Set as my city**).

15.8 Converter

15.8.1 Unit converter

You can use the Weight and Length conversion by selecting the unit you wish to convert via ▲▼, then input the digits. After press "**Ok**", you can get the converter results.

15.8.2 Currency converter

The currency converter allows you to:

- Convert a currency directly into euros and vice versa (1).
- Convert between international currencies, both currencies must be selected by pressing ⏮⏭. You are requested to input the appropriate exchange rate.

15.9 Stopwatch

The stopwatch is a simple application for measuring time with the possibility to register several results and suspend/resume measurement.

(1) For the former European national currencies, the currency converter uses the final Euro conversion rates set on 31/12/1998, which are used in accordance with official conversion rules.

16 Java.....

Your Alcatel cellphone may include [1] some Java™ applications and games. You can also download new applications and games to your cellphone.

16.1 Java applications

Select "**Java applications**" to launch applications.

16.2 Java settings

This menu allows you to manage Java settings, in which you may set Audio, Backlight, Vibration and Heap size.

16.3 Java network

This menu allows you to select the network for Java.

16.4 Trusted certificates

View detailed information of the trusted certificates supported by your cellphone.

[1] Depending on your network operator.

Disclaimer

Downloading or running applications will not damage or alter any software already in your cellphone designed to support Java™ technology. TCT Mobile Limited and its affiliates waive any responsibility and refuse to guarantee applications that are subsequently used, as well as for all applications not embedded in the handset upon purchase. The purchaser alone bears the risk of loss, damage or defect of the handset, or of applications/software, and generally of any damage or consequence resulting from the use of the said applications/software. In the event that the said applications/software, or the subsequent setup of any function are lost due to technical reasons resulting from the handset being replaced/repaired, the cellphone owner should repeat the operation and download or set up again. TCT Mobile Limited and its affiliates grant no guarantee and disclaim any responsibility if the operation cannot be repeated or cannot be performed without incurring some cost.

17 Applications .....

17.1 Web

17.1.1 Homepage

Launch the Wap browser with the preset homepage.

17.1.2 Bookmarks

Access your favorite sites.

17.1.3 Recent pages

Pages which you recently browsed.

17.1.4 Offline pages

Pages available for offline viewing.

17.1.5 Go to URL

Enter the URL of Wap site.

17.1.6 Push inbox

Store WAP push messages.

17.1.7 Profiles

Customize your browser preferences.

17.2 Bluetooth™

Access this feature by pressing to enter the main menu, then selecting "**Applications\Bluetooth**".

To use your cellphone with a Bluetooth device, you need to proceed in two steps:

- Pair and register the device to your cellphone,
- Select it to use hands-free communication. Only one Bluetooth audio device (your Bluetooth headset or your Bluetooth car kit) can be connected during the communication.

Pair and register your Bluetooth device

Activate the Bluetooth feature by selecting the "**Bluetooth\Activation\On**" option. Then enter the "**Device list**" menu to search for connectable Bluetooth devices and select the device you want to be paired with in the list. If the bluetooth device has no keyboard, enter its default password to register it with your cellphone. If the Bluetooth device has keyboard/keypad, enter the same set of password on both handset and the device to get it registered.

From the list, search for new devices, press "**Options**" to connect/disconnect, rename or delete an unconnected one from the list.

Don't forget to turn on your Bluetooth device and activate the pairing mode while pairing it with your cellphone.

Available functions

Data transmit	Exchange files with another bluetooth device.
Handle a call	Initiate or receive a phone call with a Bluetooth headset.
Listen to music	Support A2DP profile.
PBAP (Phonebook access profile)	Make contacts in Directory & Call log easily accessible and even directly operated on car kit or Bluetooth headset if PBAP supported.
Visibility	Select whether you want to hide ("**off**") or show to all ("**on**") your cellphone.
My phone's name	You may change your cellphone name, which is visible to the others.

Always activate Bluetooth in your cellphone first before connecting it to a Bluetooth device. Be aware that Bluetooth activation will slightly affect battery life of your cellphone.

Bluetooth technology allows free wireless connections between all Bluetooth-compliant devices within short range. Please make sure that the Bluetooth headset or the Bluetooth car kit and your cellphone are in this range and set as "**On**" of Visibility.

Your cellphone is Bluetooth™ v1.1, v1.2 and v2.0 compatible.

17.3 Local games

Your Alcatel cellphone may include some games.

17.4 News (1)

It is a huge time saver providing news updates from a website in a simple form.

Once subscribed to a channel, it gives you the ability to track and manage all your favorite RSS content on your cellphone at anytime, anywhere!

Available options:

View	Message title or message summary of a channel with URL will be shown.
Update	Refresh the content of a channel.
Create channel	Create a new channel with name and URL.
Delete	Delete the channel.
Edit	Edit the name or URL of a channel.
Update all	Refresh all channels.
Settings	Select a regular interval to retrieve updates automatically, set to show images or not, as well as Network account to connect to.
Enable/Disable all auto-update	Activate auto-update or not to all channels.

(1) Depending on your network operator.

17.5 Weather (1)

Your cellphone is equipped with a weather function for consulting up to 3-day forecasts of favorite cities.

To access the function from the main screen, select "**Applicatioins\ Weather**".

Press ⏮ ⏭ scroll left or right to switch the cities.

Enter "**AccuWeather.com**" to access online website, which may charge extra fee.

Available options:

More information	Search more weather information online.
Forecast	Display 3-day weather forecast.
Update	Refresh weather information.
My cities	List all my cities, you can add new city, set as default, delete the selected city, etc.
Settings	Set unit, update mode and network.

17.6 Services

Contact your network operator to check service availability.

(1) Depending on your network operator.

18 Profiles.....

With this menu, you may personalize ringtones for different events and environments. Profile options include: General, Meeting, Outdoor, Indoor, Silence and Flight Mode.

18.1 General

To modify the sound settings within any profile, press "**Options**" and select "**Edit**" and you will see the functions below by scrolling up/down Volume key:

Ringtone	Select a melody from the list by scrolling up and down the Volume key then confirm by pressing "**Options\Select**".
Mode	You may set your cellphone ringtone to Normal, Vibration (all sounds are replaced by vibrations except for alarms), Vibration and Melody, Vibration then Melody, Discreet (beep then ring), Beep and Vibration, Silence (no sounds except for alarms, the icon will be displayed).
Volume	Adjust the volume using the up/down key.
Key beep	Select the type of key beep.
Message beep	Select a melody for a new incoming message.
Power on beep	Select a Power on melody for your cellphone.
Power off beep	Select a Power off melody for your cellphone.

18.2 Meeting

When this is selected the cellphone will not ring or beep unless an alarm has been set. A new event will cause it to vibrate.

18.3 Outdoor

It is a profile designed for outdoor users who require louder ringtones.

18.4 Indoor

Ringtone/beep volume will be slightly lower than General mode volume.

18.5 Silence

This profile will turn off all ringtones, including notification sounds.

18.6 Flight mode

Voice calls, Bluetooth and messaging functions are barred. Can be used to increase standby duration.

19 web2go *.....

The service above includes special features to bring you an even better web browsing experience and account access.

* Carrier data plan is required to use this feature.

20 Making the most of your cellphone .....

20.1 PC suite

You can download software upgrade for free from the website. The PC suite includes:

- **Backup/restore**
  You can backup the important data in your cellphone and restore them when needed.
- **GPRS Modem**
  Use your cellphone to connect PC to the internet.
- **Multimedia Personalization**
  Customize your cellphone with images, animations and melodies.
- **Messaging**
  You can compose SMS/MMS easily on your PC and transfer them to your cellphone.

Supported Operating Systems

Windows 2000/XP/Vista/Windows 7.

20.2 Webcam (1)

You can use your cellphone as a webcam for instant messaging on your PC.

- Connect your cellphone to PC via USB cable.
- Go to "**My computer**" folder on your PC and find USB video device (Under Scanners & Cameras).

(1) The using of webcam may vary according to the operating system of your PC.

20.3 One Touch Upgrade

Using One Touch Upgrade tool you can update your cellphone's software from your PC.

Download One Touch Upgrade from ALCATEL website (www.alcatelonetouch.com) and install it on your PC.Launch the tool and update your cellphone by following the step by step instructions (refer to the User Guide provided together with the tool).

Your cellphone's software will now have the latest software.

All personal information will be permanently lost following the update process. We recommend you backup your personal data using PC Suite before upgrading.

21 Latin input mode/ character table .....

There are two text entry methods that can be used to write messages

- Normal
- Predictive with the eZi mode

Normal

This mode allows you to type text by choosing a letter or a sequence of characters.

Predictive eZi mode

This mode speeds up the writing of your text.

Press the key once and the word will be modified each time you press a key. As you go on, the word will keep changing.

22 Alcatel Mobile Phones Limited Warranty .....

TCT Mobile North America LTD warrants to the original retail purchaser of this wireless device, that should this product or part thereof during normal consumer usage and condition, be proven to be defective in material or workmanship that results in product failure within the first twelve (12) months from the date of purchase as shown on your original sales receipt. Such defect(s) will be repaired or replaced (with new or rebuilt parts) at the company's option without charge for parts or labor directly related to the defect(s).

Batteries, power adapters, and other accessories sold as in box items are also warranted against defects and workmanship that results in product failure within the first six (6) months period from the date of purchase as shown on your original sales receipt. Such defect(s) will be repaired or replaced (with new or rebuilt parts) and the company's option without charge for parts or labor directly related to the defect(s).

The limited warranty for your wireless device will be voided if any of the following conditions occur:

- Non-compliance with the instructions for use or installation, or with technical and safety standards applicable in the geographical area where your cellphone is used;
- Connection to any equipment not supplied or not recommended by TCT Mobile;
- Modification or repair performed by individuals not authorized by TCT Mobile or its affiliates;
- Acts of god such as Inclement weather, lightning, power surges, fire, humidity, infiltration of liquids or foods, chemical products, download of files, crash, high voltage, corrosion, oxidation;
- Removal or altering of the wireless devices event labels or serial numbers (IMEI);

- Damage from exposure to water or other liquids, moisture, humidity, excessive temperatures or extreme environmental conditions, sand, excess dust and any condition outside the operating guidelines;
- Defects in appearance, cosmetic, decorative or structural items such as framing and non-operative parts.

There are no express warranties, whether written, oral or implied, other than this printed limited warranty or the mandatory warranty provided by your jurisdiction. In no event shall TCT Mobile or any of its affiliates be liable for incidental or consequential damages of any nature whatsoever, including but not limited to commercial loss, to the full extent those damages can be disclaimed by law. Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitation of the duration of implied warranties, so the preceding limitations or exclusions may not apply to you.

How to obtain Support: Contact the customer care center by calling (877-702-3444) or going to www.alcatelonetouch.com. We have placed many self-help tools that may help you to isolate the problem and eliminate the need to send your wireless device in for service. In the case that your wireless device is no longer covered by this limited warranty due to time or condition we have other options that you may utilize our out of warranty repair options.

To obtain hardware repairs or replacement within the terms of this warranty, contact TCT Mobile to get an RMA number, include a copy of the original proof of warranty coverage (e.g. original copy of the dated bill of sale, invoice), the consumer's return address, your wireless carrier's name, alternate daytime cellphone number, and email address with a complete problem description. Only ship the wireless device. Do not ship the SIM card, memory cards, or any other accessories such as the power adapter. You must properly package and ship the wireless device to the repair center.

TCT Mobile is not responsible for wireless devices that do not arrive at the service center. Upon receipt, the service center will verify the warranty conditions, repair, and return your wireless device to the address provided.

23 Accessories (1)

The latest generation of Alcatel GSM cellphones offers a built-in handsfree feature that allows you to use the cellphone from a distance, placed on a table for example. For those who prefer to keep their conversations confidential, an earpiece is also available known as the headset.

Standard charger

Battery

USB cable

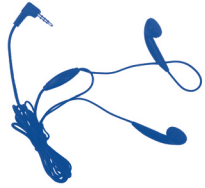

Stereo headset

Only use your cellphone with Alcatel batteries, chargers and accessories in your box.

(1) Images for reference only.

24 Troubleshooting .....

Before contacting the aftersales department, you are advised to follow the instructions below:

- You are advised to switch off the cellphone from time to time to optimize its performance.
- You are advised to fully charge ( ) the battery for optimal operation.
- Avoid storing large amounts of data in your cellphone as this may affect the performance of your cellphone.

and carry out the following checks:

My cellphone will not switch on

- Press until the screen comes on
- Check the battery charge level
- Check the battery contacts, remove and reinstall your battery, then turn your cellphone back on

My cellphone has not responded for several minutes

- Press the key
- Remove the battery and re-insert it, then switch the cellphone back on

My screen is difficult to read

- Clean your screen
- Use your cellphone in accordance with the recommended conditions of use

My cellphone turns off by itself

- Check that your keypad is locked when you are not using your cellphone
- Check the battery charge level

My cellphone has a low level of autonomy

- Make sure you respected the complete charge timing (minimum 3 hours)
- After a partial charge, the battery level indicator may not be exact. Wait for at least 20 minutes after removing the charger to obtain an exact indication

My cellphone will not charge properly

- Make sure that your battery is not completely discharged; If the battery is flat, it may take around 20 minutes to display the battery charger indicator on the screen

- Make sure charging is carried out under normal conditions (0°C (32°F)-+40°C (104°F))
- Make sure your battery is inserted. It must be inserted before plugging in the charger
- Make sure you are using an Alcatel battery and charger in the box
- When abroad, check that the electrical current is compatible

My cellphone will not connect to a network

- Try connecting in another location
- Verify the network coverage with your operator
- Check with your operator that your SIM card is valid
- Try selecting the available network(s) manually (see page 52)
- Try connecting at a later time if the network is overloaded

SIM card error

- Make sure the SIM card has been correctly inserted (see page 13)
- Verify with your operator that your SIM card is 3V or 1.8V compatible; the old 5V SIM cards cannot be used
- Make sure the chip on your SIM card is not damaged or scratched

Unable to make outgoing calls

- Make sure you have dialled a valid number and press the key
- For international calls, check the country and area codes
- Make sure your cellphone is connected to a network, and that the network is not overloaded or unavailable
- Check your subscription status with your operator (credit, SIM card valid, etc.)
- Make sure you have not barred outgoing calls (see page 50)

Unable to receive incoming calls

- Make sure your cellphone is switched on and connected to a network (check for overloaded or unavailable network)
- Check your subscription status with your operator (credit, SIM card valid, etc.)
- Make sure you have not forwarded incoming calls (see page 50)
- Make sure that you have not barred certain calls

The caller's name does not appear when a call is received

- Check that you have subscribed to this service with your operator
- Your caller has concealed his/her number

The sound quality of the calls is not optimal

- You can adjust the volume during a call by means of the key
- Check the network strength

I am unable to use the features described in the manual

- Check with your operator to make sure that your subscription includes this service
- Make sure this feature does not require an Alcatel accessory

When I select a number from my directory, the number is not dialled

- Make sure that you have correctly recorded the number in your file
- Make sure that you have selected the country prefix when calling a foreign country

I am unable to add contact in my directory

- Make sure that your SIM card directory is not full; delete some files or save the files in the product directory (i.e. your professional or personal directories)

My callers are unable to leave messages on my voicemail

- Contact your network operator to check service availability

I cannot access my voicemail

- Make sure your operator's voicemail number is correctly entered in "**My numbers**"
- Try later if the network is busy

I am unable to send and receive MMS

- Check your phone memory available as it might be full
- Contact your network operator to check service availability and check MMS parameters (see page 32)
- Verify the server center number or your MMS profile with your operator
- The server center may be swamped; try again later

The icon is displayed on my standby screen

- You have saved too many short messages on your SIM card; delete some of them or archive them in the product memory

"No service" is displayed

- You are outside of the network coverage area

I have already entered 3 incorrect PIN codes

- Contact your network operator to obtain the PUK code (Personal Unblocking Key)

I am unable to download new files

- Check for free space
- Delete some files
- Check your subscription status with your operator

My cellphone is frozen, can't power on

- Make sure your battery is not completely used up or damaged
- Remove your battery, remove your SIM card then reinstall them to power on again, if still does not work
- Hold down # key and press Power on/off key for a while to reset the cellphone

ALL User cellphone data: contacts, photos, messages and files, downloaded applications like Java games will be lost permanently.

How to make your battery last longer

- Make sure you followed the complete charge time (minimum 3 hours)
- After a partial charge, the battery level indicator may not be exact. Wait for at least 20 minutes after removing the charger to obtain an exact indication
- Switch on the backlight upon request.
- Extend email auto-check interval as long as possible.
- Update news, weather info. upon demand manually or set its auto-check interval longer.
- Exit Java background-running applications if they are not being used for a long time.
- Deactivate Bluethooth when not in use.

ALCATEL is a trademark of Alcatel-Lucent
and is used under license by
TCT Mobile Limited.

All rights reserved © Copyright 2011
TCT Mobile Limited.

TCT Mobile Limited reserves
the right to alter material or technical
specification without prior notice.